



## WEIGHT TABLE FOR ACCESSORIES

	ART.NO.	DESCRIPTION	WEIGHT (g)	Ø (mm)	HEIGHT (mm)
25-SERIES	602503	Windshield upper for cooker no 25	248	200	95
	602504	Windshield lower for cooker no 25	174	207	74
	602511	Frypan in aluminium for cooker no 25	220	220	33
	602501	Frypan in non-stick for cooker no 25	214	220	33
	602512	Saucepan in aluminium for cooker no 25, 1,5 l	139	170	75
	602513	Saucepan in aluminium for cooker no 25, 1,75 l	150	181	77
	602514	Saucepan in non-stick for cooker no 25, 1,5 l	148	169	78
	602515	Saucepan in non-stick for cooker no 25, 1,75 l	162	181	79
	200324	Kettle in aluminium, 0,9 l, for cooker no 25	188	151	84
35-SERIES	603503	Windshield upper, grey lacquered, for cooker no 35	248	200	95
	603504	Windshield lower, grey lacquered, for cooker no 35	174	207	74
	603501	Frypan in non-stick, grey lacquered for cooker no 35	214	220	33
	603514	Saucepan in non-stick, grey lacquered, for cooker no 35, 1,5 l	148	169	78
	603515	Saucepan in non-stick, grey lacquered, for cooker no 35, 1,75 l	162	181	79
	201324	Kettle in non-stick, grey lacquered, 0,9 l, for cooker no 35	204	151	84
25-SERIES UL/HA	642503	Windshield upper in ultralight aluminium for cooker no 25	204	200	95
	642504	Windshield lower in ultralight aluminium for cooker no 25	122	207	74
	642511	Frypan in ultralight aluminium for cooker no 25	118	220	33
	642501	Frypan in non-stick, ultralight for cooker no 25	172	220	33
	642512	Saucepan in ultralight aluminium for cooker no 25	112	170	75
	642513	Saucepan in ultralight aluminium for cooker no 25	118	181	77
27-SERIES	602703	Windshield upper for cooker no 27	194	170	92
	602704	Windshield lower for cooker no 27	120	182	73
	602711	Frypan in aluminium for cooker no 27	162	188	30
	602701	Frypan in non-stick for cooker no 27	154	185	31
	602721	Frypan in Duossal for cooker no 27	131	185	29
	602712	Saucepan in aluminium, outer for cooker no 27, 1 l	102	150	68
	602713	Saucepan in aluminium, inner for cooker no 27 graded, 1 l	100	146	69
	602714	Saucepan in non-stick, outer for cooker no 27, 1 l	106	150	67
	602715	Saucepan, non-stick, inner for cooker no 27, graded, 1 l	106	146	69
	602716	Saucepan in Duossal, outer for cooker no 27, 1 l	130	148	66
	602717	Saucepan in Duossal, inner for cooker no 27, graded, 1 l	134	145	68
		200325	Kettle in aluminium, 0,6 l, for cooker no 27	136	134
27-SERIES UL/HA	642703	Windshield upper in ultralight aluminium for cooker no 27	170	170	92
	642704	Windshield lower in ultralight aluminium for cooker no 27	92	182	73
	642711	Frypan in ultralight aluminium for cooker no 27	80	188	30
	642701	Frypan in non-stick, ultralight for cooker no 27	122	187	31
	642712	Saucepan in ultralight aluminium, outer for cooker no 27	80	150	68
	642713	Saucepan in ultralight aluminium, inner for cooker no 27	80	146	69
MISCELLANEOUS	602500	Spirit burner with screwcap	110		
	742527	Gas burner (Primus System)	178		
	746007	Bag for gas burner	18		
		Instructions for gas burner (Primus System)	10		
	602510	Handle	48		
	606800	Strap 68 cm	20		
	606100	Strap 61 cm	20		
	P114	Plastic bag with instructions	6		